

# FILO

Istruzioni di montaggio ed uso  
 Operation instructions  
 Instructions de montage et usage  
 Montage-und Bedienungsanleitung  
 Instrucciones de montaje y uso  
 instrucțiuni pentru montare și utilizare



IR SAP SPA 45031 Arquà Polesine (RO) Italy  
 Tel. +39 0425 466611 ; Fax +39 0425 466662  
 Website: <http://www.irsap.com>; E-mail: [info@irsap.it](mailto:info@irsap.it)

Numero Verde  
**800-252246**

IR GROUP S.A.S. 7.rue du Pont à Lunettes  
 69390 Vourles (France)  
 Tel. +33 04 72 31 86 31 ; Fax +33 04 72 31 86 32  
 Web: <http://www.irsap.com>; E-mail: [irsaprhoss@irgroup.fr](mailto:irsaprhoss@irgroup.fr)


IR SAP-RHOSS Clima Integral, S.L. Oficinas y Almacén:  
 C./ Leonardo da Vinci, 4 Pol. Ind. Cami Ral  
 08850 GAVA' (Barcelona)  
 Telf. +34 93 633 47 00 ; Fax +34 93 633 47 04  
 Web: <http://www.irsap.com>; E-mail: [info@irsap-rhoss.com](mailto:info@irsap-rhoss.com)

Atenționat al clientului  
**902-262627**

Accessori non inclusi-Accessoires non  
 compris-Accessories not included-Zubehör nicht  
 inklusive-Accesorios no incluidos-Accesorios no incluidos

Cmax = Coppia massima di serraggio  
 Cmax = Maximum torque  
 Cmax = Couple de serrage  
 Cmax = Max anzugsmoment  
 Cmax = Esfuerzo máximo de cierre  
 C max = Cuplu de strângere maxim

Cmin = Coppia minima di serraggio  
 C min = Minimum tightening torque  
 C min = Couple minimum de serrage  
 C min = Mindest-Anziehungsmoment  
 C min = Par de torsión mínimo  
 C min = Cuplu de strângere minim

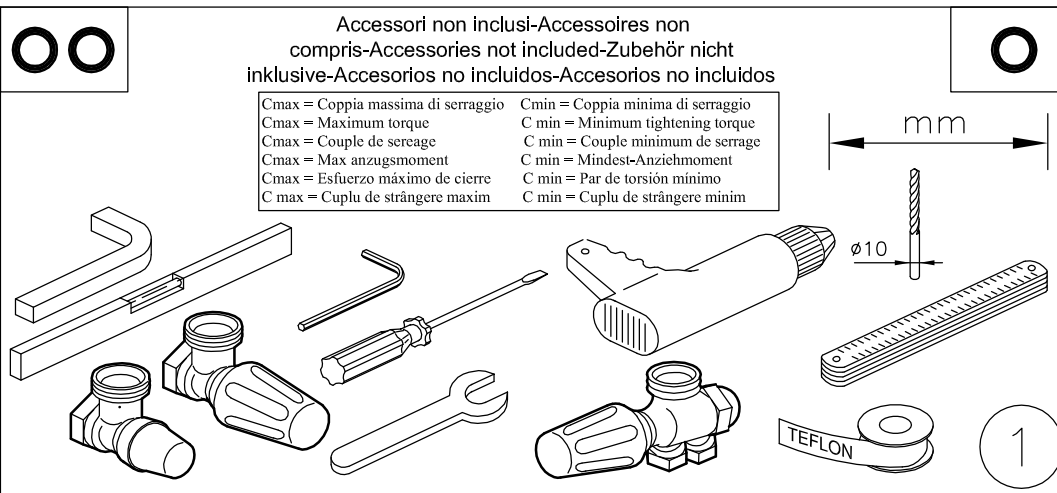

Accessori inclusi-Accessories included.  
 Accessoires compris.Zubehör inklusive.  
 Accesorios incluidos.Accesorios incluidos.

